


Unit Coolers

TA Kit 2TH

Notice originale
Original notice
Originale Hinweise

N° IN6B00929
05.2003

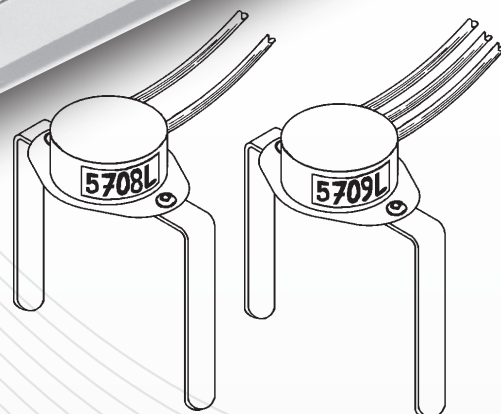

NOTICE TECHNIQUE D'INSTALLATION INSTALLATION INSTRUCTIONS INSTALLATIONSNOTIZ



FRIGA-BOHN




HK REFRIGERATION



InterLINK
Commercial Refrigeration Parts

1. MONTAGE DES THERMOSTATS THERMOSTAT MOUNTING EINBAU DER THERMOSTATE

TH

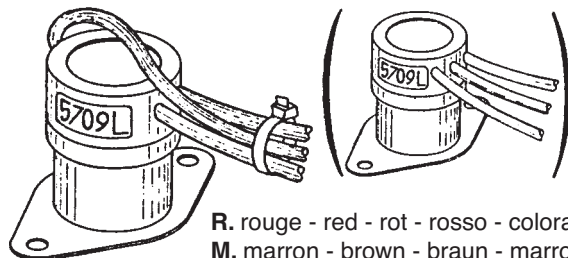


R. rouge - red - rot - rosso - colorado
M. marron - brown - braun - marrone
N. noir - black - schwarz - nero - negro

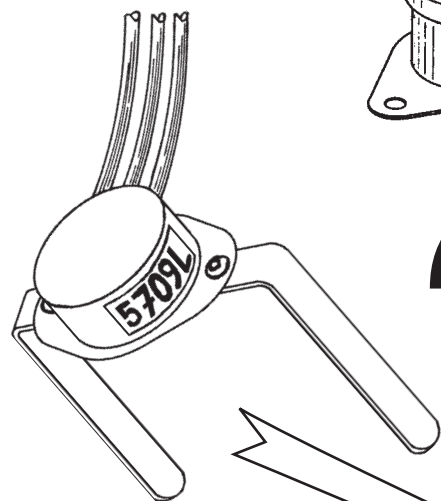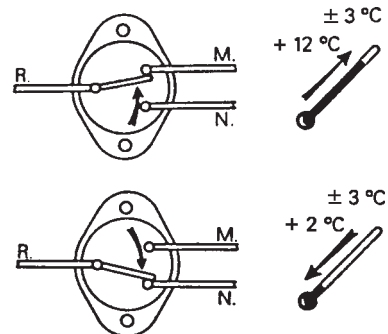


??


THS

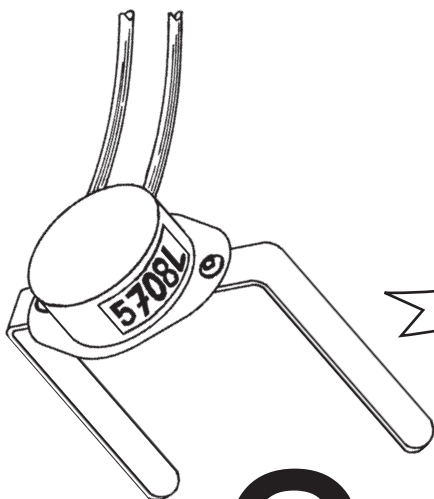

??



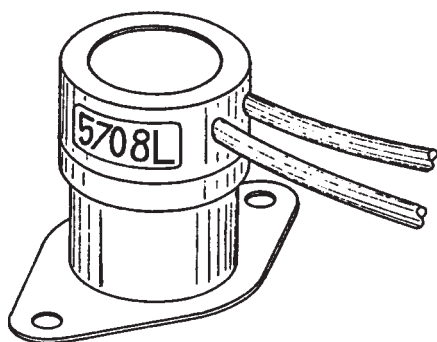


R. rouge - red - rot - rosso - colorado
BL. blanc - white - weiss - bianco


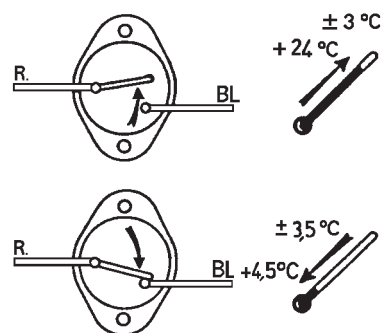


1. MONTAGE DES THERMOSTATS THERMOSTAT MOUNTING EINBAU DER THERMOSTATE

→ ① → ②

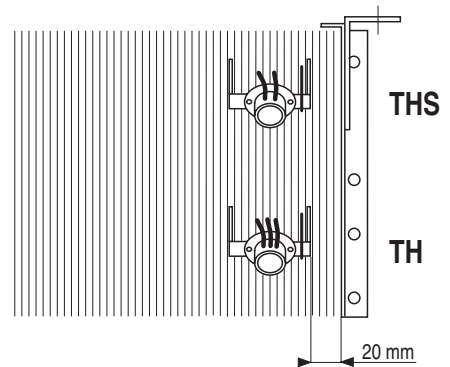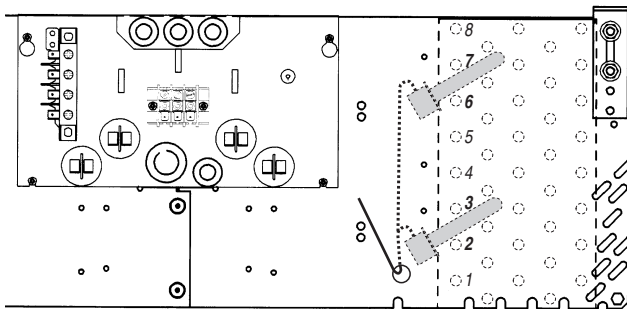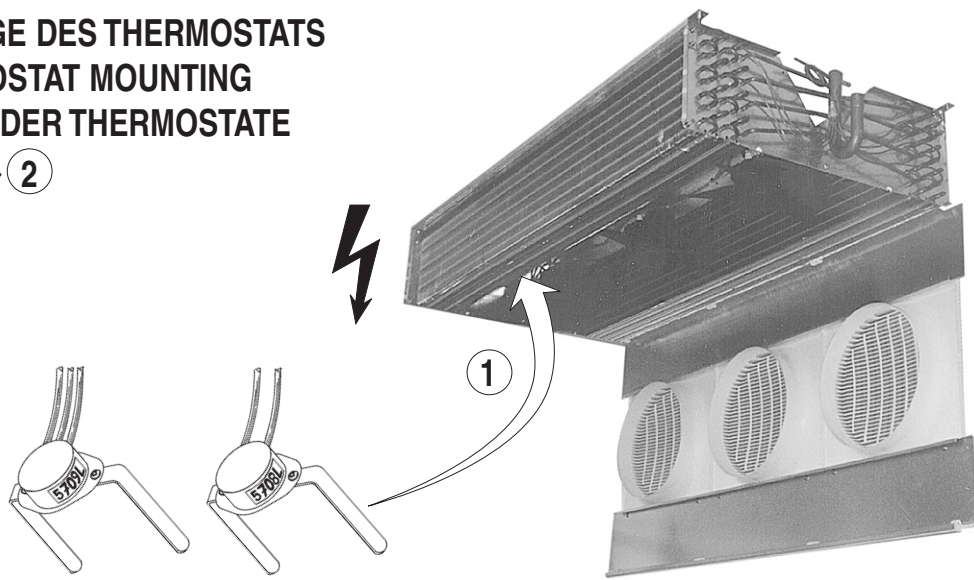


② → A → B → C

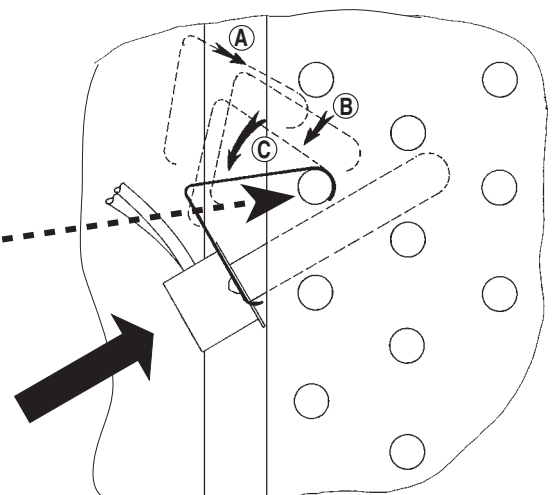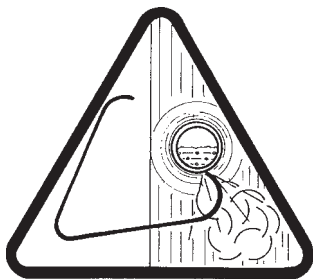

2. MONTAGE BORNIER TERMINAL BLOCK MOUNTING EINBAU DER ANSCHLUSSLEISTE

1

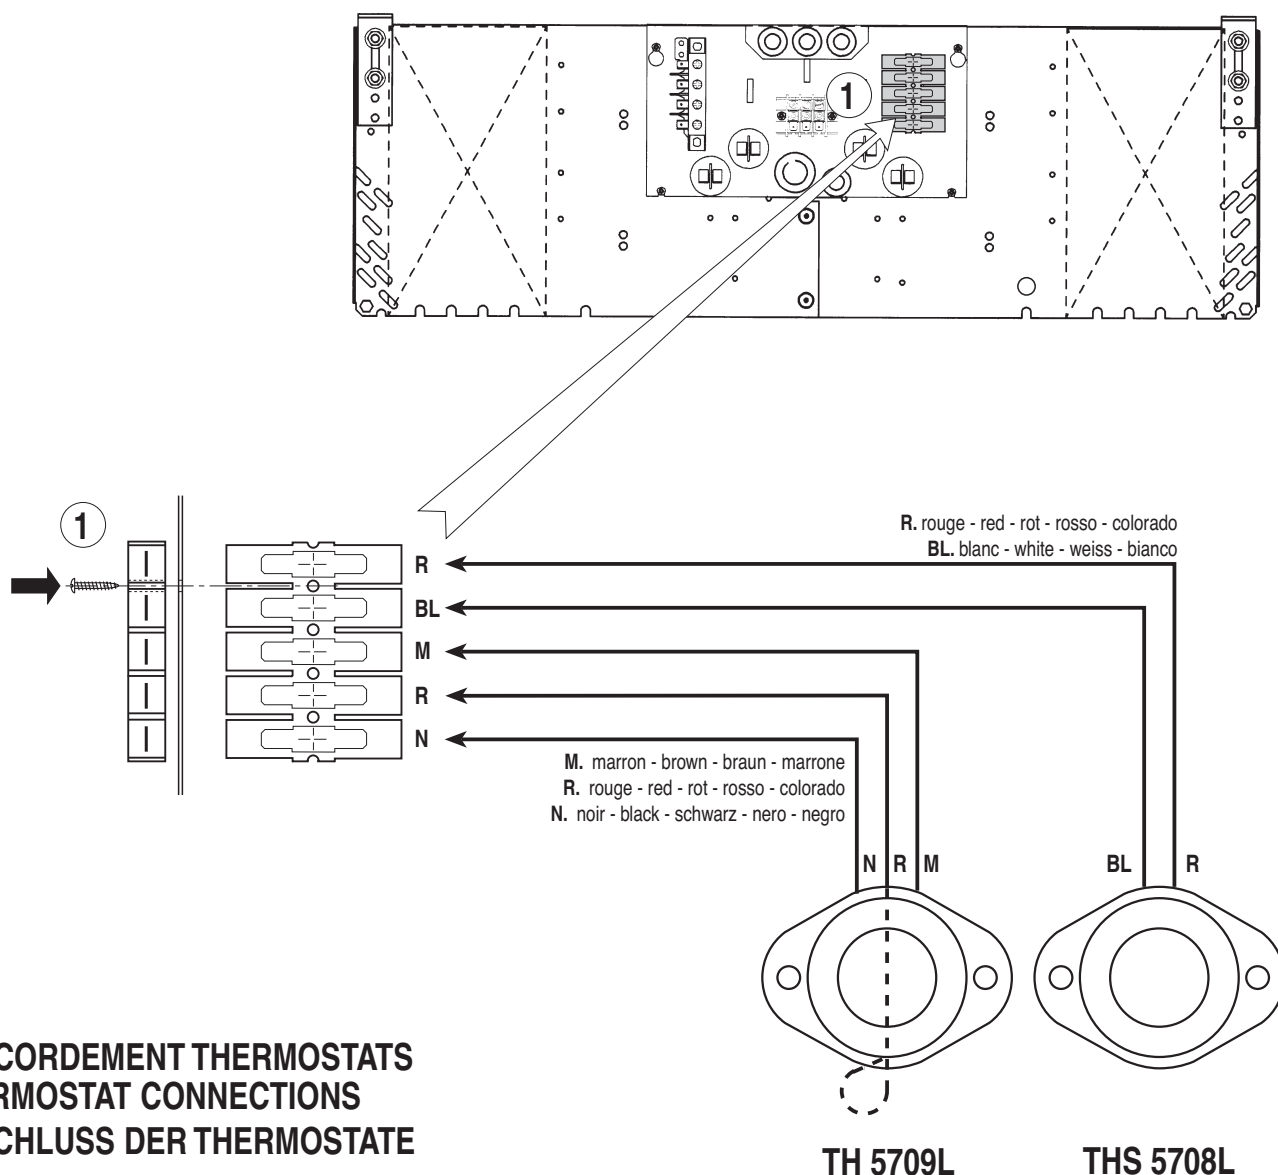

3. RACCORDEMENT THERMOSTATS THERMOSTAT CONNECTIONS ANSCHLUSS DER THERMOSTATE

